How to add a new reading?

help2.fracttal.com/hc/en-us/articles/25021433347597-How-to-add-a-new-reading

To add a reading directly to the meter, just click on the module "Readings" to bring up an options menu.

Monitoring Meters		Old Version 🕤 🧯 🗃 🖉 📳 🕌 -
Temperature DLW102 - Automóvil Aveo G	T { DLW102 }	Save
Enabled	Depends on another meter	× ×
Details	_ Is part of	
General	Automóvil Aveo GT { DLW102 }	
Dashboard	Description Sensor / Meter Temperature DLW102	Serial
(•) Alarms - Tasks Triggers	Unit	Isn't a Counter / not Accumulator
C Linked elements		

Then click on "+" to get the system to display a log window for the new reading.

Monitoring Meters				Old Version 🕤		' E (
Temperature DLW102 - Automóvil Aveo G	GT { DLW102 }					Save
Enabled						0 = :
Details	Date of entry	Date of Reading	Reading	Active Tasks	Source	
General	2024-03-11 20:53	2024-03-11 20:53	50 °C	No	Manual	
Dashboard	2024-03-11 20:53	2024-03-10 20:53	75 °C	No	Manual	
(II) Readings	2024-03-11 20:53	2024-03-08 20:53	70 °C	No	Manual	
(৩)) Alarms - Tasks Triggers	2024-03-11 20:53	2024-03-06 20:53	55 °C	No	Manual	
C Linked elements	2024-03-11 20:53	2024-03-04 09:00	60 °C	No	Manual	
	Showing 5 of 5					+
Monitoring					3	6
Meters						

— Temperature DLW102 - Automóvil Aveo GT (DLW102)							
Enabled							
Details	0	Date of entry	Date of Reading	Reading			
General	0	2024-03-11 20:53	2024-03-11 20:53		50 °C		
Dashboard	0	2024-03-11 20:53	2024-03-10 20:53		75 °C		
(I) Readings	0	2024-03-11 20:53	2024-03-08 20:53		70 °C		
((o)) Alarms - Tasks Triggers	\bigcirc	2024-03-11 20:53	2024-03-06 20:53		55 °(
C Linked elements	0	2024-03-11 20:53	2024-03-04 09:00		60 °(

```
_____
```

50

Reading

 $\hfill \square$ Reading as history, does not affect task triggers

Note: The "Reading as history, doesn't affect task triggers" option is used to record old readings without affecting task activation since, if the option isn't activated, the system won't allow you to record readings lower than the last reading recorded in the system.