

What information does a meter show?

help2.fractal.com/hc/en-us/articles/24944466871053-What-information-does-a-meter-show

To access a previously created meter, you just need to click on it to get the system to show you a new window with all the options offered, including:

The screenshot displays the configuration interface for a meter named 'Kilometers - Puller Greiner'. On the left, a sidebar contains five tabs: 'General', 'Dashboard', 'Readings', 'Alarms - Tasks Triggers', and 'Linked elements'. The 'General' tab is highlighted with a red border. The main configuration area includes an 'Enabled' toggle switch, a 'Depends on another meter' field with a dropdown menu, an 'Is part of' field with a dropdown menu, a 'Description Sensor / Meter' field with the value 'Kilometers', a 'Serial' field, a 'Unit' field with the value 'Kilómetros', an 'Is a Counter / Accumulator' toggle switch, a 'Last reading' field with the value '11.000', a 'Date' field with the value '2022-02-18', a 'Calculate Average' section with an 'Automatic' radio button, and a 'Monthly Average' field with the value '1'. At the bottom, there is a 'Restart Counter / Accumulator' button.

- **General:** Tab where you'll find the basic information associated with the meter.
- **Dashboard:** Graphic panel where meter records can be quickly viewed, along with their average and accumulated values.
- **Readings:** Table where all the recorded readings are shown, the source of the reading and if the reading activated any task.
- **Alarms-Task Triggers:** Tab where you can view the readings that have activated tasks and their next activation date.
- **Linked elements:** Tab where you can see which plan the meter is associated to in detail, along with their respective triggers by reading and by subtasks.