


Work Management Module Overview

 help.fractal.com/hc/en-us/articles/25163247368205-Work-Management-Module-Overview

The Work Management module allows the user to control all the platforms maintenance activities in one place.

In this module task plans are defined, pending tasks are rescheduled and work orders are managed in addition to having access to the calendar of activities and budgets.

How to enter the work management module?

To enter the module, click on the “Main Menu” button located in the top left of the main bar

Next, click on “Work Management” to view the sub-modules of the work management module

When displaying the Work Management menu, you will find the following submodules:

- **Planned Maintenance**
- **Works orders**
- **Budgets**