

How to add a new reading?

help.fracttal.com/hc/en-us/articles/25021433347597-How-to-add-a-new-reading

To add a reading directly on the meter, simply click the “+” sign located at the bottom right of the Readings tab.

The screenshot shows the 'Monitoring Meters' interface for a robot named 'HOROMETRO MOTOR - { 10008534 } ROBOT'. The 'Readings' tab is selected in the left sidebar. The main area displays a table with the following data:

<input type="checkbox"/>	Date of entry	Date of Reading ↓	Reading	Accumulated Value	Active Tasks	Source
<input type="checkbox"/>	2025-12-05 13:09	2025-12-05 13:05	53 HR	53 HR	Yes	Manual (Confirmed in Wo
<input type="checkbox"/>	2025-12-05 13:00	2025-12-05 13:00	0 HR	0 HR	No	Manual

A red box highlights a blue '+' button at the bottom right of the table area. The status 'Showing 2 of 2' is visible at the bottom left of the table.

Afterward, the system will display a window to record the new reading.

The screenshot shows a monitoring interface for a robot named 'HOROMETRO MOTOR - { 10008534 } ROBOT'. The interface includes a sidebar with navigation options: General, Dashboard, Readings, Alarms - Tasks Triggers, and Linked elements. The main area displays a table of meter readings. A 'New Meter Reading' dialog box is open, allowing the user to enter a new reading. The dialog box contains the following fields and options:

- Date:** 2026-06-25 14:52
- Reading:** 53
- Reading as history, does not affect task triggers

	Date of entry	Date of Reading ↓	Reading	Ac
<input type="checkbox"/>	2025-12-05 13:09	2025-12-05 13:05	53 HR	53
<input type="checkbox"/>	2025-12-05 13:00	2025-12-05 13:00	0 HR	0

Showing 2 of 2

Note: The option “Reading as history, does not affect task triggers” is used to record old readings without affecting task activation because, if this option is not selected, the system will not allow registering readings lower than the last reading recorded in the system.