

How to delete a meter in Fractal One?

 help.fractal.com/hc/en-us/articles/37439287671693-How-to-delete-a-meter-in-Fractal-One

In Fractal One, meters, counters, or accumulators are used to record readings in an ascending manner, accumulating the values from previous measurements. An example would be the **hour meter** that records the operating hours of a machine, or the **odometer** that records the mileage of a vehicle. As these meters fulfill their purpose within the system, it may be necessary to delete them in certain situations.

A meter is an instrument or device that quantifies and records the value of a physical or chemical magnitude. Common examples include measuring the volume of liquids or gases, electricity consumption, pressure, temperature, among others.

Steps to delete a meter

1. Access the monitoring module

From the main menu, access the Monitoring module and then select the Meters submodule. There you can see all the meters associated with your assets, allowing you to manage and delete those that are no longer necessary.

Catalogs

Warehouses

Work Management

Monitoring

 Meters

 Fractal Sense


Dispatcher

Business Intelligence

Cloud Disk

Requests

Online help

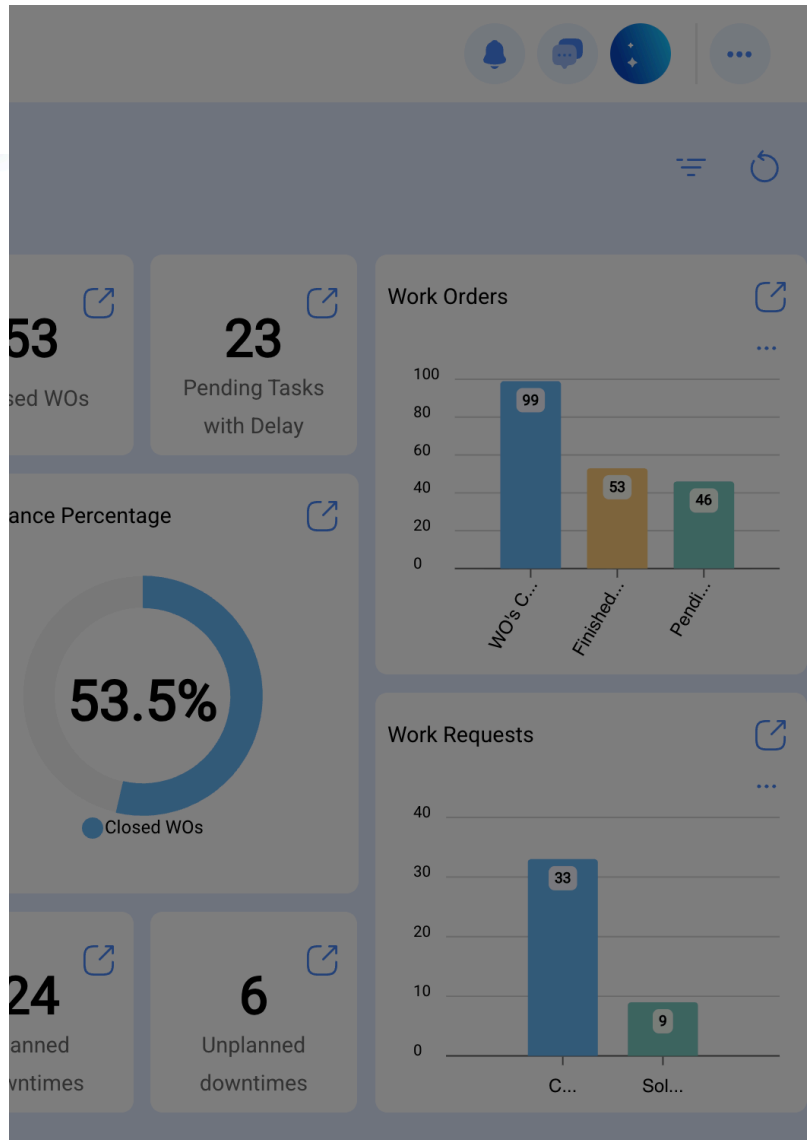

2. Select the meter to delete

Browse the list of meters and select the meter you want to delete. For example, if you have a **hour meter** on equipment that is no longer needed, select that meter.



List

Advanced



☐	Is part of	Description Sensor / Meter	Enabled	Se
☐	{ C.J-VRF01-EVAP1 } EVAPORADORA-01 VRF01	Horometro Evaporador 01	Yes	
☐	{ ACT.LOC-0001 } Fracttal	Horómetro-HC	Yes	

Showing 2 of 2



3. Delete the meter

Click on the selected meter and in the dropdown menu, choose the option "Delete".

Monitoring
Meters

JC

←

(1) Selected

Is part of

Description Sensor / Meter

Enabled

Sen

{ CJ-VRF01-EVAP1 } EVAPORADORA-01 VRF01

Horometro Evaporador 01

Yes

{ ACT.LOC-0001 } Fracttal

Horómetro-HC

Yes

Showing 2 of 2

+

You will be asked to confirm the deletion. Make sure you really want to delete the meter, as this action cannot be undone.

Monitoring
Meters

JC

←

(1) Selected

Is part of

Description Sensor / Meter

Enabled

Sen

{ CJ-VRF01-EVAP1 } EVAPORADORA-01 VRF01

Horometro Evaporador 01

Yes

{ ACT.LOC-0001 }

Yes

Showing 2 of 2

+

Confirm

Are you sure you want to delete this record?

Cancel

Yes

Is it possible to deactivate a meter?

Yes, it is possible to deactivate a meter within the **general** view of the desired device.

The screenshot displays the configuration interface for a meter named 'Extintor' (ID: { ACT.LOC-0001 } Fractal). On the left sidebar, the 'General' tab is selected. At the top of the configuration area, there is a toggle switch labeled 'Enabled' which is currently turned on (blue). Below this, the 'General' tab contains several configuration fields: 'Depends on another meter' (set to {}), 'Is part of' (set to { ACT.LOC-0001 } Fractal), 'Description Sensor / Meter' (Extintor), 'Unit' (Celsius), and 'Minimum value' (0). There is also a 'Maximum value' field set to 0. A toggle switch for 'Isn't a Counter / not Accumulator' is also visible. The top navigation bar shows 'Monitoring Meters' and user avatars for 'AI' and 'JC'.

Note: When deactivated, the meter will stop recording new readings, but its data history will remain available for future reference. Deactivation is **irreversible**.

When is it not possible to delete a meter?

In some cases, **Fractal One** will not allow the deletion of a meter if it is linked to pending or ongoing tasks, or if it is associated with active activities or reports. In these cases, you must complete or unlink the tasks and ensure that the meter is not involved in any active process before proceeding with the deletion.