

Gestión del estado "Fuera de Servicio" a través de configuración en OTs

help.fracttal.com/hc/es-es/articles/40215962922765-Gestión-del-estado-Fuera-de-Servicio-a-través-de-configuración-en-OTs

El estado de "Fuera de Servicio" de un activo puede ser administrado a través de la configuración en el módulo de Órdenes de Trabajo.

La opción *"Establecer la fecha de finalización de fuera de servicio de los activos con la fecha de finalización de la tarea"* determina cómo y cuándo finalizar dicho estado.

Por defecto, esta opción utiliza la fecha de finalización de la OT.

The screenshot shows the Fracttal Settings interface. On the left is a sidebar with a menu: General, User Accounts, Business Calendar, Modules (highlighted with a red arrow), Financial, Auxiliary Catalogs, Document Management, Transactions Log, Security, API Connections, Guest Portal, and Account. The main area is titled 'Activación Fracttal - Español - 477' and has a 'Save' button. At the top right of the main area are icons for notifications, a rocket, a blue 'AI' button, and a user profile 'J'. Below the title bar, there's a 'Type' dropdown menu set to 'Work Orders'. Underneath is a table with columns 'Options and permissions', 'Work order ID', and 'Prints'. The table has a 'Description' header and several rows of configuration options, each with a toggle switch. The second row, 'Set the end date of out of service of the assets with the date of completion of the task (by default is the end date of the task)', is highlighted with a red box. The other options are: 'Allow end / cancel WOs with pending material requisitions', 'Allow assigned human resources to be responsible for the work order (Multi-responsible)', 'Allow editing of the real used qty with pending material requisitions', 'Allow to qualify the WO even though it is under review', 'Filter human resources according to the selected profile (Within a task)', 'Allow updating triggers with active WOs', 'Establish mandatory completion of the failure catalog', 'Enable task end or stop reason' (which is currently disabled), and 'Automatically generate link to share all WO'.

Description	Work order ID	Prints
☒ Allow end / cancel WOs with pending material requisitions		
☒ Set the end date of out of service of the assets with the date of completion of the task (by default is the end date of the task)		
☒ Allow assigned human resources to be responsible for the work order (Multi-responsible)		
☒ Allow editing of the real used qty with pending material requisitions		
☒ Allow to qualify the WO even though it is under review		
☒ Filter human resources according to the selected profile (Within a task)		
☒ Allow updating triggers with active WOs		
☒ Establish mandatory completion of the failure catalog		
☐ Enable task end or stop reason		
☒ Automatically generate link to share all WO		

- **Si está activada:** el estado fuera de servicio se actualizará al completarse la tarea, sin necesidad de que la OT esté completamente finalizada, lo que permite una gestión más ágil de los activos.
- **Si está desactivada:** para que el estado fuera de servicio se cierre, tanto la OT como la tarea deben estar finalizadas, asegurando que se haya completado todo el proceso relacionado.

Esta opción se puede ajustar según las necesidades operativas, brindando flexibilidad en la gestión del estado.

Assets
Equipment

0001092025

AI

J

Equipment

ListTreemap

Enabled	Out of Service	Description	Code	Nombre	Fabric
☐ Yes	Yes	MOTOR TRIFASICO { 0001092025 }	0001092025	MOTOR TRIFASICO	WEG

Showing 1 of 1

+