


Atualização automática de localização nas OTs e Solicitações

help.fracttal.com/hc/pt-pt/articles/35644147004941-Atualização-automática-de-localização-nas-OTs-e-Solicitações

O Fracttal One oferece uma opção no módulo de **Configuração > Módulos > Ativos** que permite ativar a sincronização automática da localização dos ativos. Quando esta funcionalidade é ativada, qualquer alteração na localização de um ativo será refletida imediatamente nas Ordens de Trabalho (OTs) e Pedidos de Trabalho associadas, sem necessidade de intervenção manual.

Como ativar a atualização automática

1. Aceda ao módulo de Configuração no menu principal.

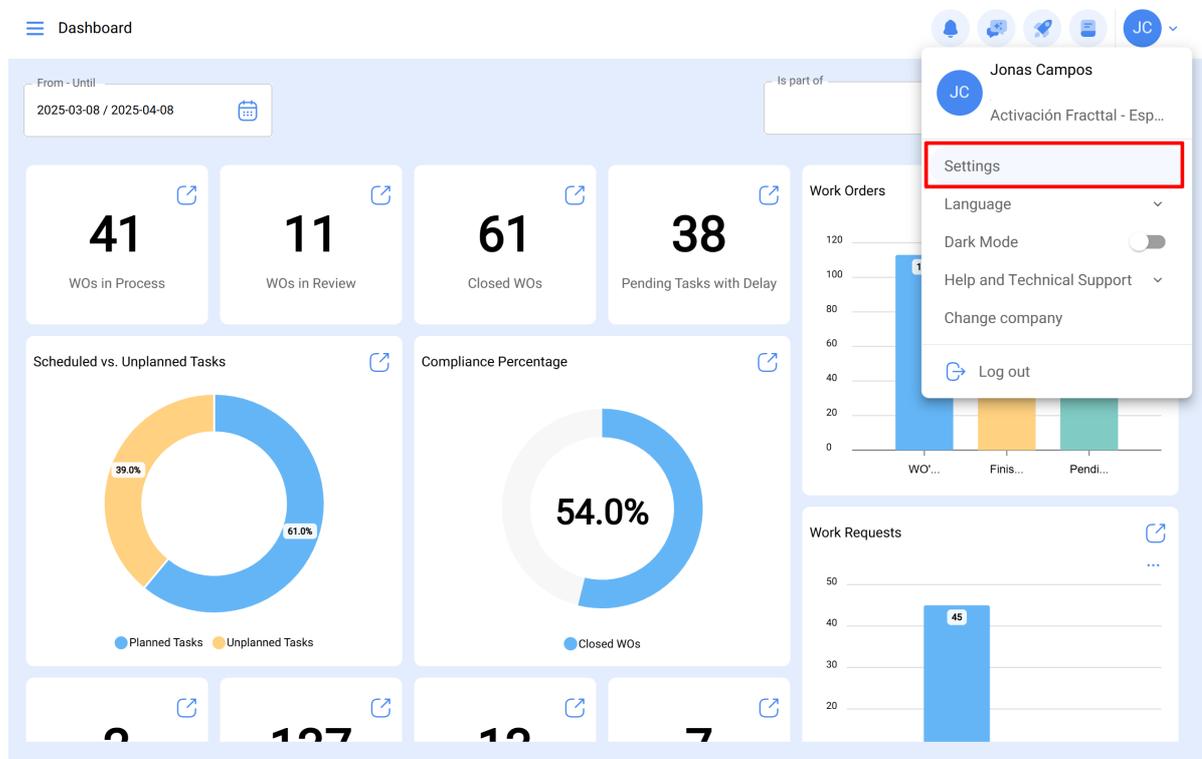

2. Vá para Módulos > Ativos e localize a opção Atualizar automaticamente OTs e solicitações ao alterar a localização do ativo.

Settings

Activación Fractal - Español - 477

Save

General

User Accounts

Business Calendar

Modules

Financial

Auxiliary Catalogs

Document Management

Transactions Log

Security

API Connections

Guest Portal

Account

Code: RFC10829120

Name: Activación Fractal - Español - 477

Email: fracttal@fractal.com

Currency: Chilean Peso

Thousands separator: (.) The character used is a p

Address: Calle de San José Artesano, 12

City: Bogota

State: Cundinamarca

Country: Colombia

Zip code: 28108

Search on the map

Inacap Apoquindo

Renovatio Restaurant Italiana

Mapa Satélite

Time zones UTC

Latitude

Longitude

Settings

Activación Fractal - Español - 477

Save

General

User Accounts

Business Calendar

Modules

Financial

Auxiliary Catalogs

Document Management

Transactions Log

Security

API Connections

Guest Portal

Account

Type: Assets

Locations

Equipment

Tools

Spare Parts

Set which of the following fields must be mandatory

Options	Required	Options	Required
Name	<input checked="" type="checkbox"/>	Group 1	<input type="checkbox"/>
Code	<input type="checkbox"/>	Group 2	<input type="checkbox"/>
Address	<input checked="" type="checkbox"/>	Barcode	<input type="checkbox"/>
City	<input type="checkbox"/>	Notes	<input type="checkbox"/>
Zip code	<input type="checkbox"/>	Priority	<input type="checkbox"/>
State	<input type="checkbox"/>	Cost center	<input type="checkbox"/>
Country	<input type="checkbox"/>		
Is part of	<input type="checkbox"/>		
Type	<input type="checkbox"/>		

3. Ative esta opção e guarde as alterações para aplicar a configuração.

The screenshot shows the 'Settings' page for 'Activación Fractal - Español - 477'. On the left, a sidebar lists various settings categories: General, User Accounts, Business Calendar, Modules (highlighted), Financial, Auxiliary Catalogs, Document Management, Transactions Log, Security, API Connections, Guest Portal, and Account. The main content area displays a list of settings for 'Equipment'. The 'Automatically update work orders and requests when the location's position is edited' option is highlighted with a red box and is currently turned on. Other settings include Name, Code, Address, City, Zip code, State, Country, Is part of, Type, Group 1, Group 2, Barcode, Notes, Priority, and Cost center, each with a toggle switch.

Setting	Status
Name	On
Code	Off
Address	On
City	Off
Zip code	Off
State	Off
Country	Off
Is part of	Off
Type	Off
Group 1	Off
Group 2	Off
Barcode	Off
Notes	Off
Priority	Off
Cost center	Off
Mark Custom Form as mandatory	Off
Automatically update work orders and requests when the location's position is edited	On

Esta funcionalidade garante que as alterações na localização dos ativos sejam atualizadas automaticamente em todas as Ordens de Trabalho e Pedidos de Trabalho. Isso melhora a precisão e rastreabilidade, evitando inconsistências nos dados e facilitando a gestão da manutenção.