


Visualizações de trabalho personalizadas

help.fracttal.com/hc/pt-br/articles/24886184898189-Visualizações-de-trabalho-personalizadas


No Fracttal One, dispomos da funcionalidade "Customised Work Views", uma ferramenta que dá a cada utilizador o poder de criar e gerir vistas específicas. Estas vistas armazenam colunas relevantes e filtros aplicados, facilitando o acesso eficiente aos ativos geridos. Esta funcionalidade não só simplifica a interação com a plataforma, como também oferece a flexibilidade de criar várias vistas de trabalho com vários filtros e colunas personalizadas. Além disso, a liberdade de definir uma vista favorita que é automaticamente apresentada ao entrar no módulo ajuda a otimizar a experiência do utilizador.

Como criar uma vista de trabalho personalizada no Fracttal One?


1. Ingresse no software Frattal One.

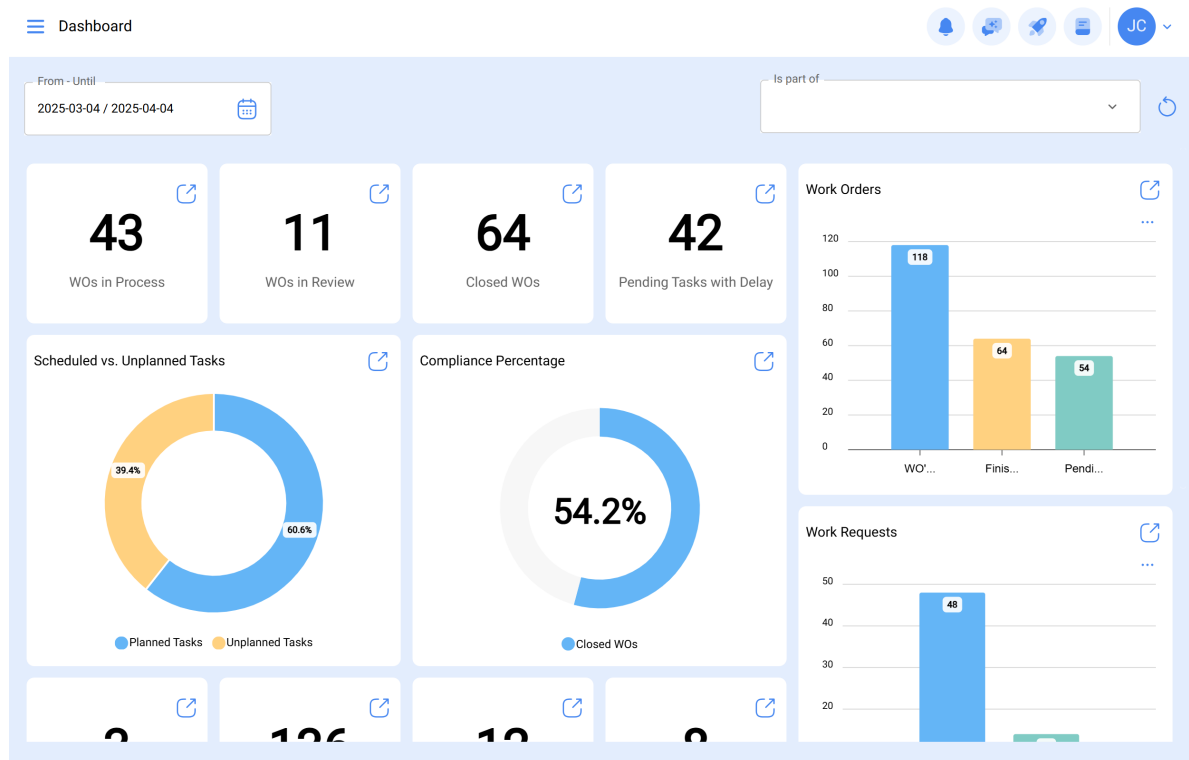

2. Ingresse no módulo de interesse, onde pretende efetuar a sua vista de trabalho personalizada (conforme aplicável).

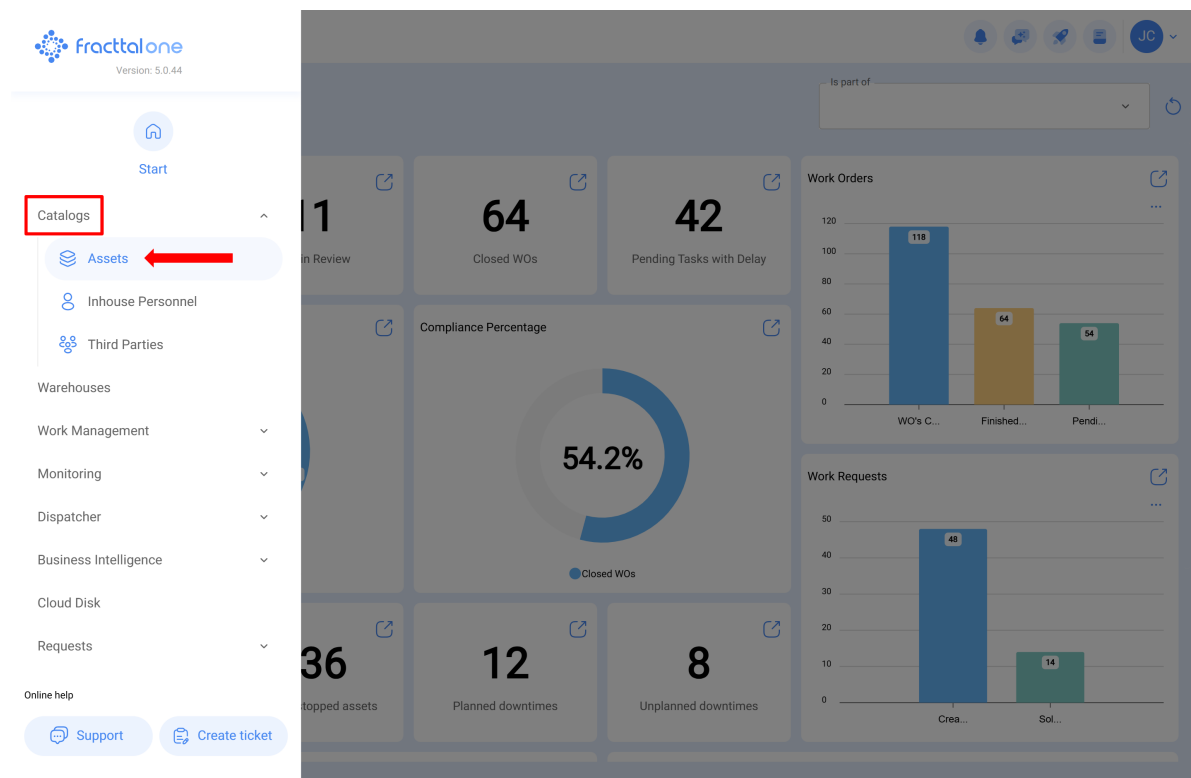

3. Uma vez dentro do módulo, clique no ícone apresentado na imagem, no canto superior direito (neste exemplo, vamos trabalhar no módulo catálogos/ativos/equipamento).

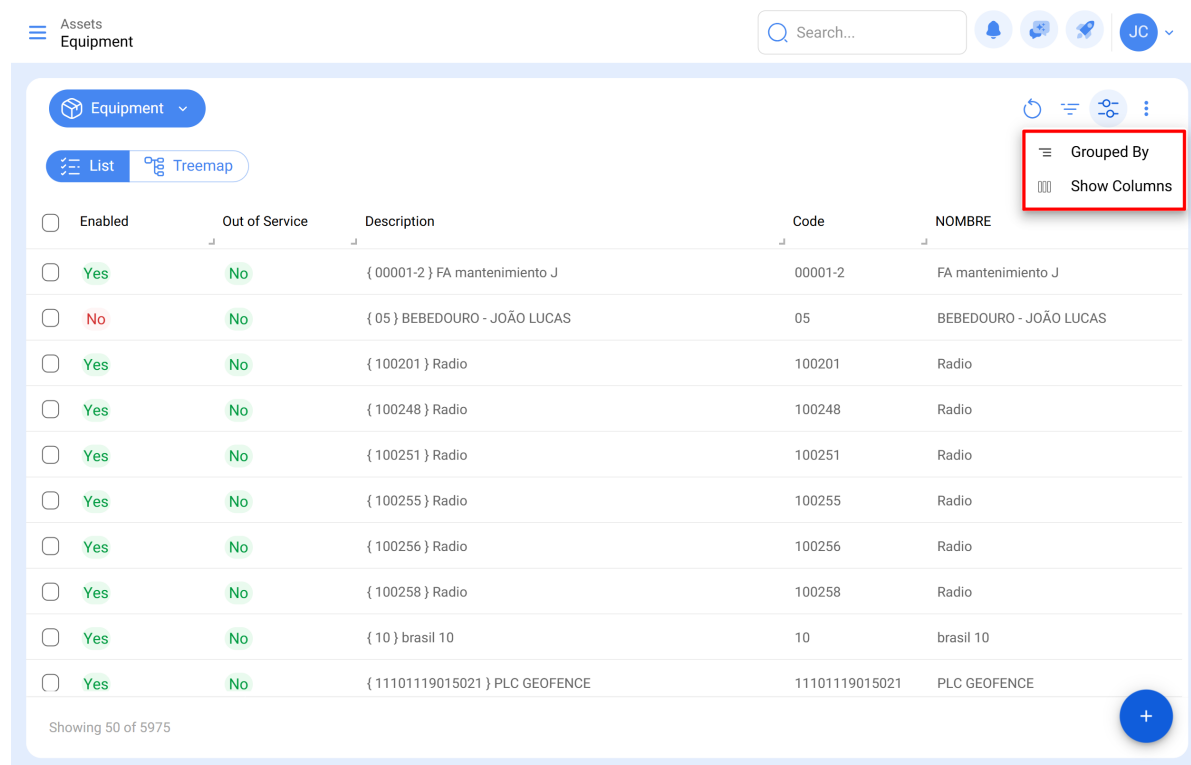

4. Aí encontrará duas opções, agrupadas por e mostrar columnas. Seleccione a opção do seu interesse.

Ativos Equipamentos

Q Pesquisar...

EA

☐ Habilitado	Fora de serviço	Descrição	Código	Código de Barras	Criti	Agrupadas Por	Mostrar Columnas
☐	Sim	Não	AGREGADO 1	84821215	Mu		
☐	Sim	Não	AGREGADO 1	857412547	Muito alto	ALF	
☐	Sim	Sim	AGREGADO 1	AGR-030-001	Muito alto	ALF	
☐	Sim	Não	AGREGADO 2	AGR-030-002	Muito alto	ALF	
☐	Sim	Não	Air conditioner		Muito alto	ALF	
☐	Sim	Não	Air Conditioners	ACC-0009			
☐	Sim	Não	Air Conditioners	ACC-001			
☐	Sim	Não	Air Conditioners	AC-000065	Muito alto		
☐	Sim	Não	Air Conditioners	AC	AC	Muito alto	ALF
☐	Sim	Não	Aire 1	Aire-Fttl-Med-01	Muito alto	AC	
☐	Sim	Não	Aire 2	Aire-Fttl-Med-02	Muito alto	AC	
☐	Sim	Não	Aire 3	Aire-Fttl-Med-03	Muito alto	AC	
☐	Sim	Não	Aire 4	Aire-Fttl-Med-04	Muito baixo	AC	
☐	Sim	Não	Aire 5	Aire-Fttl-Med-05	Muito baixo		

Mostrando 50 de 2991

O que é que se pode fazer na opção "Agrupado por"?

A opção "Agrupado por" destina-se a organizar a informação de acordo com a categoria que escolher. Ou seja, se eu seleccionar a opção "Fora de Serviço", primeiro agrupará todos os bens do tipo de equipamento que estão desactivados, depois agrupará os que estão activados.

Esta função é muito eficaz para classificar a informação de forma específica e ordenada, permitindo uma melhor visualização e compreensão dos dados.

Como aplicar a vista personalizada "Agrupado por"?

1. Clique na opção "Agrupado por".

The screenshot shows the 'Assets Equipment' page. At the top right, there is a search bar and a user profile 'JC'. Below the search bar, there is a 'Equipment' dropdown menu. To the right of the 'Equipment' dropdown, there is a 'List' button and a 'Treemap' button. A red box highlights the 'Grouped By' dropdown menu, which is currently open, showing the 'Show Columns' option. The main table displays a list of equipment items with columns: Enabled, Out of Service, Description, Code, and NOMBRE. The table shows 10 items, with the first item being 'FA mantenimiento J' and the last item being 'PLC GEOFENCE'. A blue plus button is visible at the bottom right of the table.

Enabled	Out of Service	Description	Code	NOMBRE
☐	No	{ 00001-2 } FA mantenimiento J	00001-2	FA mantenimiento J
☐	No	{ 05 } BEBEDOURO - JOÃO LUCAS	05	BEBEDOURO - JOÃO LUCAS
☐	No	{ 100201 } Radio	100201	Radio
☐	No	{ 100248 } Radio	100248	Radio
☐	No	{ 100251 } Radio	100251	Radio
☐	No	{ 100255 } Radio	100255	Radio
☐	No	{ 100256 } Radio	100256	Radio
☐	No	{ 100258 } Radio	100258	Radio
☐	No	{ 10 } brasil 10	10	brasil 10
☐	No	{ 11101119015021 } PLC GEOFENCE	11101119015021	PLC GEOFENCE

Showing 50 of 5975

2. Em seguida, selecione a opção pela qual pretende efetuar o agrupamento; lembre-se que só pode ser selecionada uma opção de cada vez e, em seguida, clique fora da caixa.

The screenshot shows the 'Assets Equipment' page. The 'Grouped By' dropdown menu is open, and the 'Out of Service' option is selected, indicated by a blue checkmark. The main table displays a list of equipment items with columns: Enabled, Out of Service, and Description. The table shows 10 items, with the first item being '2009 { AGR-030-001 } AGREGADO 1 2009' and the last item being '{ BAN-02 } BANCO DE MOLIENDA 02'. A blue plus button is visible at the bottom right of the table.

Enabled	Out of Service	Description
☐	Yes	2009 { AGR-030-001 } AGREGADO 1 2009
☐	Yes	ADAPTEC { EQ-EM-BT-001 } Banda transportadora FU 78J5F
☐	Yes	{ ARY-HOR-002 } HORNO
☐	Yes	ARYZTA { 000-2 } VENTILADOR MECANICO 71018
☐	Yes	ATLAS COPCO { COMP-077 } COMPRESOR 77
☐	Yes	ATLAS COPCO { HOR-02 } HORNO 02
☐	Yes	ATLAS COPCO { HOR-03 } HORNO 03
☐	Yes	{ BAN-01 } BANCO DE MOLIENDA 01
☐	Yes	{ BAN-02 } BANCO DE MOLIENDA 02

Showing 50 of 5975

3. Clique novamente no ícone, como mostra a figura.

Assets
Equipment

Search...

Equipment

List Treemap

☐	Enabled	Out of Service	Description	Code	NOMBRE
☐	Yes	No	{ 00001-2 } FA mantenimiento J	00001-2	FA mantenimiento J
☐	No	No	{ 05 } BEBEDOURO - JOÃO LUCAS	05	BEBEDOURO - JOÃO LUCAS
☐	Yes	No	{ 100201 } Radio	100201	Radio
☐	Yes	No	{ 100248 } Radio	100248	Radio
☐	Yes	No	{ 100251 } Radio	100251	Radio
☐	Yes	No	{ 100255 } Radio	100255	Radio
☐	Yes	No	{ 100256 } Radio	100256	Radio
☐	Yes	No	{ 100258 } Radio	100258	Radio
☐	Yes	No	{ 10 } brasil 10	10	brasil 10
☐	Yes	No	{ 11101119015021 } PLC GEOFENCE	11101119015021	PLC GEOFENCE

Showing 50 of 5975

4. Seleccione "Adicionar vista".

Assets
Equipment

Search...

Equipment

List Treemap

+ Add View

Grouped By

Show Columns

☐	Enabled	Out of Service	Description	Code	NOMBRE
☐	Yes	No	{ 00001-2 } FA mantenimiento J	00001-2	FA mantenimiento J
☐	No	No	{ 05 } BEBEDOURO - JOÃO LUCAS	05	BEBEDOURO - JOÃO LUCAS
☐	Yes	No	{ 100201 } Radio	100201	Radio
☐	Yes	No	{ 100248 } Radio	100248	Radio
☐	Yes	No	{ 100251 } Radio	100251	Radio
☐	Yes	No	{ 100255 } Radio	100255	Radio
☐	Yes	No	{ 100256 } Radio	100256	Radio
☐	Yes	No	{ 100258 } Radio	100258	Radio
☐	Yes	No	{ 10 } brasil 10	10	brasil 10
☐	Yes	No	{ 11101119015021 } PLC GEOFENCE	11101119015021	PLC GEOFENCE

Showing 50 of 5975

5. Uma vez lá dentro, introduza o nome pretendido para a vista personalizada.

The screenshot shows the 'Assets Equipment' page. On the right side, there is a red rectangular box highlighting the 'Description' input field. The input field is currently empty. Above the input field, there is a blue back arrow icon and a blue circular icon with a document symbol. Below the input field, there is a table with columns 'Enabled', 'Out of Service', and 'Description'. The table contains 10 rows of data. At the bottom of the table, it says 'Showing 50 of 5975'.

Enabled	Out of Service	Description
☐ Yes	☐ No	{ 00001-2 } FA mantenimiento J
☐ No	☐ No	{ 05 } BEBEDOURO - JOÃO LUCAS
☐ Yes	☐ No	{ 100201 } Radio
☐ Yes	☐ No	{ 100248 } Radio
☐ Yes	☐ No	{ 100251 } Radio
☐ Yes	☐ No	{ 100255 } Radio
☐ Yes	☐ No	{ 100256 } Radio
☐ Yes	☐ No	{ 100258 } Radio
☐ Yes	☐ No	{ 10 } brasil 10
☐ Yes	☐ No	{ 11101119015021 } PLC GEOFENCE

Showing 50 of 5975

6. Clique em "Guardar".

The screenshot shows the 'Assets Equipment' page. On the right side, there is a red rectangular box highlighting the 'Guardar' button. The button is a blue circle with a white document icon. Below the button, there is a table with columns 'Enabled', 'Out of Service', and 'Description'. The table contains 10 rows of data. At the bottom of the table, it says 'Showing 50 of 5975'.

Enabled	Out of Service	Description
☐ Yes	☐ No	{ 00001-2 } FA mantenimiento J
☐ No	☐ No	{ 05 } BEBEDOURO - JOÃO LUCAS
☐ Yes	☐ No	{ 100201 } Radio
☐ Yes	☐ No	{ 100248 } Radio
☐ Yes	☐ No	{ 100251 } Radio
☐ Yes	☐ No	{ 100255 } Radio
☐ Yes	☐ No	{ 100256 } Radio
☐ Yes	☐ No	{ 100258 } Radio
☐ Yes	☐ No	{ 10 } brasil 10
☐ Yes	☐ No	{ 11101119015021 } PLC GEOFENCE

Showing 50 of 5975

7. Em seguida, clique novamente no ícone de acordo com a imagem.

The screenshot shows the 'Equipment' list view in a software interface. At the top, there's a search bar and a user profile 'JC'. Below the search bar, there's a 'Equipment' dropdown menu and a settings icon (a gear with a red dot) highlighted by a red box. The main area displays a table with columns: 'Enabled', 'Out of Service', 'Description', 'Code', and 'NOMBRE'. The table lists various equipment items, including 'FA mantenimiento J', 'BEBEDOURO - JOÃO LUCAS', and several 'Radio' items. At the bottom, it says 'Showing 50 of 5975' and there's a blue circular button with a plus sign.

Enabled	Out of Service	Description	Code	NOMBRE
☐ Yes	☐ No	{ 00001-2 } FA mantenimiento J	00001-2	FA mantenimiento J
☐ No	☐ No	{ 05 } BEBEDOURO - JOÃO LUCAS	05	BEBEDOURO - JOÃO LUCAS
☐ Yes	☐ No	{ 100201 } Radio	100201	Radio
☐ Yes	☐ No	{ 100248 } Radio	100248	Radio
☐ Yes	☐ No	{ 100251 } Radio	100251	Radio
☐ Yes	☐ No	{ 100255 } Radio	100255	Radio
☐ Yes	☐ No	{ 100256 } Radio	100256	Radio
☐ Yes	☐ No	{ 100258 } Radio	100258	Radio
☐ Yes	☐ No	{ 10 } brasil 10	10	brasil 10
☐ Yes	☐ No	{ 11101119015021 } PLC GEOFENCE	11101119015021	PLC GEOFENCE

8. Seleccione "Vista guardada".

This screenshot is similar to the previous one, but with the settings menu open. The 'Asset Availability' menu is visible, and the 'Saved View' option is highlighted with a red box. The table content remains the same as in the previous screenshot.

Enabled	Out of Service	Description	Code	NOMBRE
☐ Yes	☐ No	{ 00001-2 } FA mantenimiento J	00001-2	FA mantenimi
☐ No	☐ No	{ 05 } BEBEDOURO - JOÃO LUCAS	05	BEBEDOURO - JOÃO LUCAS
☐ Yes	☐ No	{ 100201 } Radio	100201	Radio
☐ Yes	☐ No	{ 100248 } Radio	100248	Radio
☐ Yes	☐ No	{ 100251 } Radio	100251	Radio
☐ Yes	☐ No	{ 100255 } Radio	100255	Radio
☐ Yes	☐ No	{ 100256 } Radio	100256	Radio
☐ Yes	☐ No	{ 100258 } Radio	100258	Radio
☐ Yes	☐ No	{ 10 } brasil 10	10	brasil 10
☐ Yes	☐ No	{ 11101119015021 } PLC GEOFENCE	11101119015021	PLC GEOFENCE

9. Aqui encontrará todas as suas vistas guardadas e basta clicar na estrela para ativar ou desativar a vista, conforme necessário.

The screenshot shows the 'Assets Equipment' interface. On the left, there is a table with columns 'Enabled', 'Out of Service', and 'Description'. The table lists 10 items, each with a checkbox and status indicators. On the right, there is a 'Saved View' panel. The 'Asset Availability' view is highlighted with a red box. The panel also shows a star icon for toggling the view.

Enabled	Out of Service	Description
☐ Yes	No	{ 00001-2 } FA mantenimiento J
☐ No	No	{ 05 } BEBEDOURO - JOÃO LUCAS
☐ Yes	No	{ 100201 } Radio
☐ Yes	No	{ 100248 } Radio
☐ Yes	No	{ 100251 } Radio
☐ Yes	No	{ 100255 } Radio
☐ Yes	No	{ 100256 } Radio
☐ Yes	No	{ 100258 } Radio
☐ Yes	No	{ 10 } brasil 10
☐ Yes	No	{ 11101119015021 } PLC GEOFENCE

Showing 50 of 5975

Showing 1 of 1

Também pode apagar e editar a vista; basta seleccioná-la e aparecerão as outras opções, como mostra a imagem.

The screenshot shows the 'Assets Equipment' interface. On the right, the 'Saved View' panel is visible. The 'Asset Availability' view is selected, and the 'Edit' and 'Delete' icons are highlighted with red boxes. The panel also shows a star icon for toggling the view.

Enabled	Out of Service	Description
☐ Yes	No	{ 00001-2 } FA mantenimiento J
☐ No	No	{ 05 } BEBEDOURO - JOÃO LUCAS
☐ Yes	No	{ 100201 } Radio
☐ Yes	No	{ 100248 } Radio
☐ Yes	No	{ 100251 } Radio
☐ Yes	No	{ 100255 } Radio
☐ Yes	No	{ 100256 } Radio
☐ Yes	No	{ 100258 } Radio
☐ Yes	No	{ 10 } brasil 10
☐ Yes	No	{ 11101119015021 } PLC GEOFENCE

Showing 50 of 5975

Showing 1 of 1


O que é que se pode fazer na opção "Mostrar colunas"?

A opção "Mostrar colunas" foi concebida para lhe permitir seleccionar as colunas que pretende apresentar na interface. Além disso, o utilizador pode posicionar as colunas a seu gosto, bastando deslocar o nome com um clique e manter premido para cima ou para baixo.

Com esta funcionalidade no Fractal One, garantimos que a informação com que o utilizador está a trabalhar é personalizada de acordo com as suas necessidades no módulo em que pretende trabalhar.

Como aplicar a vista personalizada "Mostrar colunas"?

1. Clique na opção "Mostrar colunas".

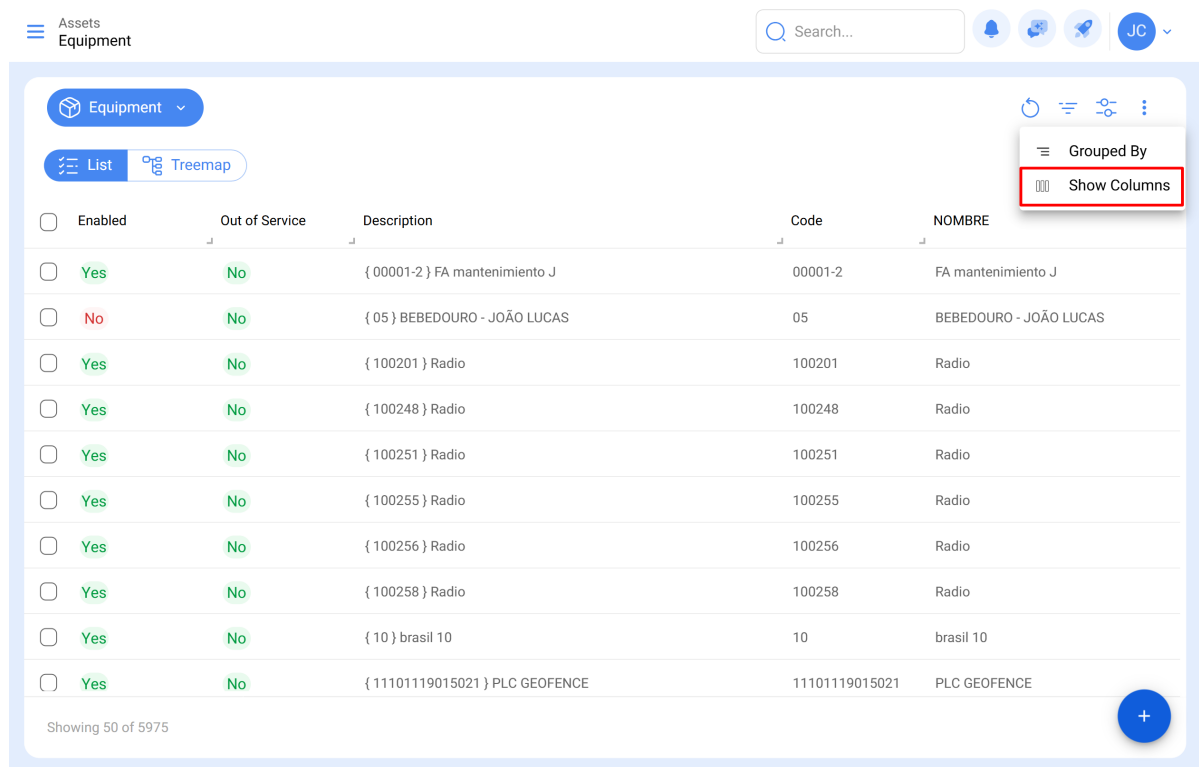

The screenshot shows the Fractal One interface for the 'Equipment' module. At the top, there is a search bar and a user profile icon labeled 'JC'. Below the search bar, there is a dropdown menu with the 'Equipment' label. To the right of the dropdown, there are icons for refresh, list, treemap, and a settings icon. The settings icon is highlighted, and a dropdown menu is open, showing the 'Show Columns' option. The main table displays a list of equipment items with columns for 'Enabled', 'Out of Service', 'Description', 'Code', and 'NOMBRE'. The table is filtered to show 50 of 5975 items.

Enabled	Out of Service	Description	Code	NOMBRE
☐ Yes	☐ No	{ 00001-2 } FA mantenimiento J	00001-2	FA mantenimiento J
☐ No	☐ No	{ 05 } BEBEDOURO - JOÃO LUCAS	05	BEBEDOURO - JOÃO LUCAS
☐ Yes	☐ No	{ 100201 } Radio	100201	Radio
☐ Yes	☐ No	{ 100248 } Radio	100248	Radio
☐ Yes	☐ No	{ 100251 } Radio	100251	Radio
☐ Yes	☐ No	{ 100255 } Radio	100255	Radio
☐ Yes	☐ No	{ 100256 } Radio	100256	Radio
☐ Yes	☐ No	{ 100258 } Radio	100258	Radio
☐ Yes	☐ No	{ 10 } brasil 10	10	brasil 10
☐ Yes	☐ No	{ 11101119015021 } PLC GEOFENCE	11101119015021	PLC GEOFENCE

Showing 50 of 5975

2. Em seguida, selecione os títulos que pretende que apareçam na interface e anule a seleção dos que não pretende que apareçam.

Assets Equipment

Equipment

List Treemap

Enabled	Out of Service	Description
Yes	No	{ 00001-2 } FA mantenimiento J
No	No	{ 05 } BEBEDOURO - JOÃO LUCAS
Yes	No	{ 100201 } Radio
Yes	No	{ 100248 } Radio
Yes	No	{ 100251 } Radio
Yes	No	{ 100255 } Radio
Yes	No	{ 100256 } Radio
Yes	No	{ 100258 } Radio
Yes	No	{ 10 } brasil 10
Yes	No	{ 11101119015021 } PLC GEOFENCE

Showing 50 of 5975

Show Columns

- Enabled
- Out of Service
- Description
- Code
- NOMBRE
- MARCA
- MODELO
- Serial
- GARANTIA
- CAPACIDAD DE ALMACENAMIENTO
- Barcode
- Priority
- Type
- Group 1
- Group 2
- Purchase date
- Is part of
- Hours of average daily use
- Visible to all

3. Com um simples clique, altere a ordem dos nomes de acordo com as suas necessidades. A ordem hierárquica que definir na caixa também se refletirá na interface.

Assets Equipment

Equipment

List Treemap

Out of Service	Enabled	Code	Description
No	Yes	00001-2	{ 00001-2 } FA mantenimiento J
No	No	05	{ 05 } BEBEDOURO - JOÃO LUCAS
No	Yes	100201	{ 100201 } Radio
No	Yes	100248	{ 100248 } Radio
No	Yes	100251	{ 100251 } Radio
No	Yes	100255	{ 100255 } Radio
No	Yes	100256	{ 100256 } Radio
No	Yes	100258	{ 100258 } Radio
No	Yes	10	{ 10 } brasil 10
No	Yes	11101119015021	{ 11101119015021 } PLC GEOFENCE

Showing 50 of 5975

Show Columns

- Out of Service
- Enabled
- Code
- Description
- MARCA
- MODELO
- NOMBRE
- GARANTIA
- Serial
- CAPACIDAD DE ALMACENAMIENTO
- Barcode
- Priority
- Type
- Group 1
- Group 2
- Purchase date
- Is part of
- Hours of average daily use
- Visible to all

4. Clique fora da caixa.

5. Clique novamente no ícone, como mostra a figura.

Assets
Equipment

Search...

Equipment

List Treemap

☐	Out of Service	Enabled	Code	Description	MARCA	NOMBRE
☐	No	Yes	00001-2	{ 00001-2 } FA mantenimiento J		FA mantenimiento J
☐	No	No	05	{ 05 } BEBEDOURO - JOÃO LUCAS		BEBEDOURO - JOÃO LUCAS
☐	No	Yes	100201	{ 100201 } Radio		Radio
☐	No	Yes	100248	{ 100248 } Radio		Radio
☐	No	Yes	100251	{ 100251 } Radio		Radio
☐	No	Yes	100255	{ 100255 } Radio		Radio
☐	No	Yes	100256	{ 100256 } Radio		Radio
☐	No	Yes	100258	{ 100258 } Radio		Radio
☐	No	Yes	10	{ 10 } brasil 10		brasil 10
☐	No	Yes	11101119015021	{ 11101119015021 } PLC GEOFENCE		PLC GEOFENCE
☐	No	Yes	111019011012	{ 111019011012 } PLC Geofence		PLC Geofence
☐	No	Yes	111019014000	{ 111019014000 } PLC Geofence		PLC Geofence

Showing 50 of 5975

6. Selecione "Adicionar visão".

Assets
Equipment

Search...

Equipment

List Treemap

☐	Out of Service	Enabled	Code	Description	MARCA	NOMBRE
☐	No	Yes	00001-2	{ 00001-2 } FA mantenimiento J		FA mantenimiento J
☐	No	No	05	{ 05 } BEBEDOURO - JOÃO LUCAS		BEBEDOURO - JOÃO LUCAS
☐	No	Yes	100201	{ 100201 } Radio		Radio
☐	No	Yes	100248	{ 100248 } Radio		Radio
☐	No	Yes	100251	{ 100251 } Radio		Radio
☐	No	Yes	100255	{ 100255 } Radio		Radio
☐	No	Yes	100256	{ 100256 } Radio		Radio
☐	No	Yes	100258	{ 100258 } Radio		Radio
☐	No	Yes	10	{ 10 } brasil 10		brasil 10
☐	No	Yes	11101119015021	{ 11101119015021 } PLC GEOFENCE		PLC GEOFENCE
☐	No	Yes	111019011012	{ 111019011012 } PLC Geofence		PLC Geofence
☐	No	Yes	111019014000	{ 111019014000 } PLC Geofence		PLC Geofence

Showing 50 of 5975

+ Add View
Grouped By
Show Columns

7. Uma vez lá dentro, introduza o nome pretendido para a vista personalizada.

The screenshot shows the 'Assets Equipment' page. On the right side, there is a red rectangular box highlighting the 'Description' input field. The input field is empty and has a placeholder text 'Description'. Above the input field, there is a blue circular icon with a white document symbol. Below the input field, there is a blue circular icon with a white document symbol. The main content area of the page displays a table with columns: Out of Service, Enabled, Code, and Description. The table contains 15 rows of equipment data. The status 'Out of Service' is set to 'No' for all items. The 'Enabled' status is 'Yes' for most items, except for one which is 'No'. The 'Code' column contains various alphanumeric codes, and the 'Description' column contains descriptions in Portuguese and Spanish. At the bottom of the table, it says 'Showing 50 of 5975'.

Out of Service	Enabled	Code	Description
No	Yes	00001-2	{ 00001-2 } FA mantenimiento J
No	No	05	{ 05 } BEBEDOURO - JOÃO LUCAS
No	Yes	100201	{ 100201 } Radio
No	Yes	100248	{ 100248 } Radio
No	Yes	100251	{ 100251 } Radio
No	Yes	100255	{ 100255 } Radio
No	Yes	100256	{ 100256 } Radio
No	Yes	100258	{ 100258 } Radio
No	Yes	10	{ 10 } brasil 10
No	Yes	11101119015021	{ 11101119015021 } PLC GEOFENCE
No	Yes	111019011012	{ 111019011012 } PLC Geofence
No	Yes	111019014000	{ 111019014000 } PLC Geofence

8. Clique em "Guardar".

The screenshot shows the 'Assets Equipment' page. On the right side, there is a red rectangular box highlighting the 'Description' input field. The input field now contains the text 'Custom Work Order'. Above the input field, there is a blue circular icon with a white document symbol. Below the input field, there is a blue circular icon with a white document symbol. The main content area of the page displays the same table as in the previous screenshot. At the bottom of the table, it says 'Showing 50 of 5975'.

Out of Service	Enabled	Code	Description
No	Yes	00001-2	{ 00001-2 } FA mantenimiento J
No	No	05	{ 05 } BEBEDOURO - JOÃO LUCAS
No	Yes	100201	{ 100201 } Radio
No	Yes	100248	{ 100248 } Radio
No	Yes	100251	{ 100251 } Radio
No	Yes	100255	{ 100255 } Radio
No	Yes	100256	{ 100256 } Radio
No	Yes	100258	{ 100258 } Radio
No	Yes	10	{ 10 } brasil 10
No	Yes	11101119015021	{ 11101119015021 } PLC GEOFENCE
No	Yes	111019011012	{ 111019011012 } PLC Geofence
No	Yes	111019014000	{ 111019014000 } PLC Geofence

9. Em seguida, clique novamente no ícone de acordo com a imagem.

Assets
Equipment

Search...

Equipment

List Treemap

Enabled Out of Service Description Code NOMBRE

Available: No

☐	Yes	Yes	2009 { AGR-030-001 } AGREGADO 1 2009	AGR-030-001	AGREGADO 1
☐	Yes	Yes	ADAPTEC { EQ-EM-BT-001 } Banda transportadora FU 78J5F3ECEC...	EQ-EM-BT-001	Banda transportadora FU
☐	Yes	Yes	{ ARY-HOR-002 } HORNO	ARY-HOR-002	HORNO
☐	No	Yes	ARYZTA { 000-2 } VENTILADOR MECANICO 71018	000-2	VENTILADOR MECANICO
☐	Yes	Yes	ATLAS COPCO { COMP-077 } COMPRESOR 77	COMP-077	COMPRESOR 77
☐	Yes	Yes	ATLAS COPCO { HOR-02 } HORNO 02	HOR-02	HORNO 02
☐	Yes	Yes	ATLAS COPCO { HOR-03 } HORNO 03	HOR-03	HORNO 03
☐	Yes	Yes	{ BAN-01 } BANCO DE MOLIENDA 01	BAN-01	BANCO DE MOLIENDA 01
☐	Yes	Yes	{ BAN-02 } BANCO DE MOLIENDA 02	BAN-02	BANCO DE MOLIENDA 02

Showing 50 of 5975

10. Selecione "Vista guardada".

Assets
Equipment

Search...

Equipment

List Treemap

Out of Service Enabled Code Description MARCA

☐	No	Yes	00001-2	{ 00001-2 } FA mantenimiento J	
☐	No	No	05	{ 05 } BEBEDOURO - JOÃO LUCAS	BEBEDOURO - JOÃO LUCAS
☐	No	Yes	100201	{ 100201 } Radio	Radio
☐	No	Yes	100248	{ 100248 } Radio	Radio
☐	No	Yes	100251	{ 100251 } Radio	Radio
☐	No	Yes	100255	{ 100255 } Radio	Radio
☐	No	Yes	100256	{ 100256 } Radio	Radio
☐	No	Yes	100258	{ 100258 } Radio	Radio
☐	No	Yes	10	{ 10 } brasil 10	brasil 10
☐	No	Yes	11101119015021	{ 11101119015021 } PLC GEOFENCE	PLC GEOFENCE
☐	No	Yes	111019011012	{ 111019011012 } PLC Geofence	PLC Geofence
☐	No	Yes	111019014000	{ 111019014000 } PLC Geofence	PLC Geofence

Showing 50 of 5975

Custom Work Order

- Saved View
- Grouped By
- Show Columns

11. Aqui encontrará todas as suas vistas guardadas e basta clicar na estrela para ativar ou desativar a vista, conforme necessário.

The screenshot shows the 'Assets Equipment' interface. On the left, there is a table with columns: Out of Service, Enabled, Code, and Description. The table lists 13 items, including various radio equipment and PLC Geofence items. Below the table, it says 'Showing 50 of 5975'. On the right, there is a 'Saved View' panel. It has a search bar and a list of saved views. The first view is 'Custom Work Order', which is highlighted with a red box. A star icon is next to it, indicating it is the active view. Below the 'Custom Work Order' view, it says 'Showing 1 of 1'.

Out of Service	Enabled	Code	Description
No	Yes	00001-2	{ 00001-2 } FA mantenimiento J
No	No	05	{ 05 } BEBEDOURO - JOÃO LUCAS
No	Yes	100201	{ 100201 } Radio
No	Yes	100248	{ 100248 } Radio
No	Yes	100251	{ 100251 } Radio
No	Yes	100255	{ 100255 } Radio
No	Yes	100256	{ 100256 } Radio
No	Yes	100258	{ 100258 } Radio
No	Yes	10	{ 10 } brasil 10
No	Yes	11101119015021	{ 11101119015021 } PLC GEOFENCE
No	Yes	111019011012	{ 111019011012 } PLC Geofence
No	Yes	111019014000	{ 111019014000 } PLC Geofence

Também pode apagar e editar a vista; basta seleccioná-la e aparecerão as outras opções, como mostra a imagem.

This screenshot shows the same 'Assets Equipment' interface, but with the 'Custom Work Order' view selected. The 'Custom Work Order' view is highlighted with a red box. Above it, the text '(1) Selected' is visible. To the right of the view name, there are three icons: a pencil (edit), a trash can (delete), and a square (clone). These icons are also highlighted with a red box. Below the 'Custom Work Order' view, it says 'Showing 1 of 1'.

Out of Service	Enabled	Code	Description
No	Yes	00001-2	{ 00001-2 } FA mantenimiento J
No	No	05	{ 05 } BEBEDOURO - JOÃO LUCAS
No	Yes	100201	{ 100201 } Radio
No	Yes	100248	{ 100248 } Radio
No	Yes	100251	{ 100251 } Radio
No	Yes	100255	{ 100255 } Radio
No	Yes	100256	{ 100256 } Radio
No	Yes	100258	{ 100258 } Radio
No	Yes	10	{ 10 } brasil 10
No	Yes	11101119015021	{ 11101119015021 } PLC GEOFENCE
No	Yes	111019011012	{ 111019011012 } PLC Geofence
No	Yes	111019014000	{ 111019014000 } PLC Geofence